

PROGRAMMING

PROGRAMMING TRANSMITTER:

Note: This mode will only retain the last 4 remote transmitters programmed. If the transmitter memory is exceeded, the security system will start deleting transmitters from memory in chronological order.

1. Turn the Ignition 'switch' **'OFF/ON' 3 TIMES** and stay in **ON position**.
"Within 15 seconds".
2. Push the Valet switch **2 times** and hold it on the **2nd** push until a long chirp is heard then release the valet switch. You are now in the Transmitter programming mode.
3. Press and hold any button of the transmitter until the siren responds with a confirming chirp, indicating the signal has been stored into memory.
4. If you have additional transmitters (up to 4) that need to be programmed, repeat step 3 for each transmitter.

Exit: Turn Ignition to 'OFF' position, or leave it for 15 seconds. 3 long chirps & 3 parking light flashes will confirm exit.

FEATURES PROGRAMMING:

ALARM FEATURE "A" PROGRAMMING:

1. Turn the Ignition 'switch' **'ON/OFF' 3 TIMES** and stay in **OFF position**.
2. Push the Valet switch **3 times** (holding in on the **3rd push**) until **one** chirp with one long chirp is heard, then release the valet switch. You are now in the Alarm feature **"A"** programming mode.
3. Press and release the transmitter button corresponding to the feature you want to program.